


WASHRITE T1500A RACK CONVEYOR DISHWASHER

OPERATING & MAINTENANCE INSTRUCTIONS

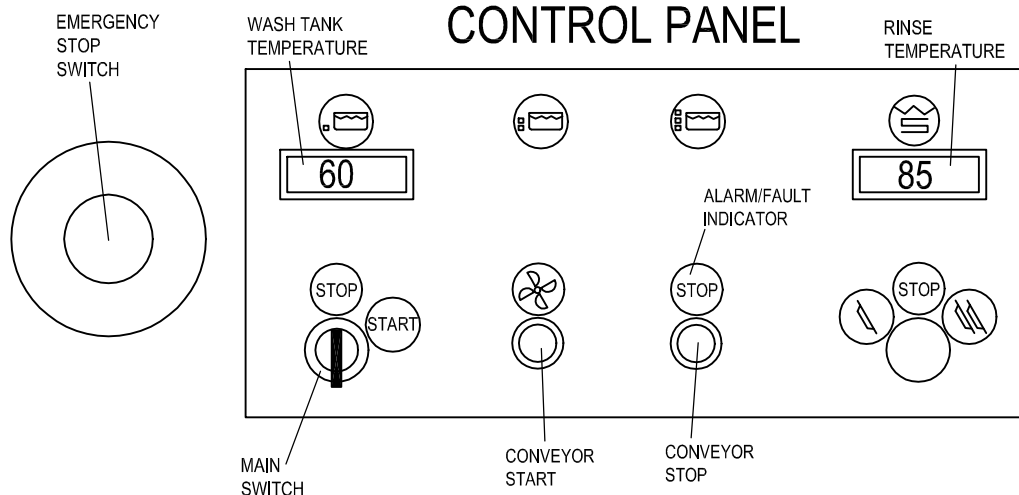

Using the machine

FILLING

Check that the scrap filter trays, wash arms and curtains are all in position. Make sure drain valve lever is in the closed position. Close the machine doors. Make sure that the wall-mounted electrical isolator is in the 'on' position and that the water supply to the machine is turned on. Turn main switch on machine control panel to the 'START' position. Machine will fill and will start to heat up. Wait until rinse temperature gauge reaches 80 to 85 degrees and wash temperature gauge reaches 60 degrees. The dishwasher is now ready for use.

WASHING

Press the conveyor start button (fan symbol). Always use the correct basket for the items to be washed. Scrape all loose food off plates before loading into basket. Rinse away sauces or gravies before loading into machine. Introduce the first basket full of dirty items into the load end of the dishwasher, where it will be pulled through the machine by the conveyor mechanism and pushed out at the other end. Note that the exit table is fitted with a safety switch to stop the conveyor when the table is full. The conveyor will not restart until the table is cleared.

To stop the conveyor at any time, use the conveyor stop button. ***In an emergency, use the emergency stop switch, which will hold in. Twist to release so that the machine can be restarted.***

DRAIN-DOWN & DAILY CLEANING

When you have finished washing, switch off the dishwasher using the main switch on the control panel. Turn off the isolating switch on the wall. Turn drain valve lever to drain position. Open the machine door and remove the scrap filter trays. Rinse filter trays under running water, using a soft nylon brush to remove any debris. Rinse out the inside of the machine using a wash-down hose, or a bucket of clean water. Clean the inside of the door. Always leave the door open when the machine is not in use.

WEEKLY CLEANING

In addition to cleaning filters **EVERY** time tank is drained, wash arms (upper & lower) should be removed for cleaning on a weekly basis. Release arms which have a bayonet fitting action and wash in clean water to remove any residues. Do not poke wash or rinse jets with any sharp object which will cause damage and affect wash performance. The end caps can be unscrewed so that the arms can be flushed through. ***Be careful not to lose the rubber seals inside the end caps.*** Remove the internal curtains and scrub thoroughly at the sink to remove any food remains. Make sure that each curtain is replaced in the correct position.

WATER TREATMENT

If you are in a hard water area, this dishwasher must be used in conjunction with an external water softener. Keep automatic water softeners topped up with salt. Salt manual water softeners at least once per week, more frequently if the interior of the machine shows any sign of scale build-up. ***Failure to adequately treat water will give bad results and cause damage to the dishwasher***