


# WASHRITE T2000 RACK CONVEYOR DISHWASHER

## OPERATING & MAINTENANCE INSTRUCTIONS

March 2018

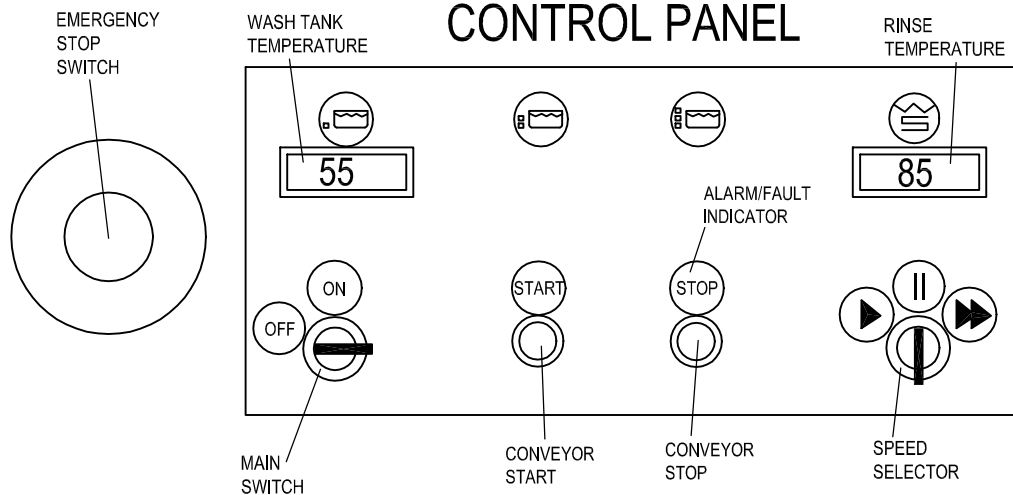

## Using the machine

### FILLING

Check that the drain valve is at 6 o'clock, scrap filter trays, wash arms and curtains are all in position. Close the machine door. Make sure that the wall-mounted electrical isolator is in the 'on' position and that the water supply to the machine is turned on. Turn main switch on machine control panel to the 'ON' position. Machine will fill and will start to heat up. Wait until rinse temperature gauge reaches 80 to 85 degrees and wash temperature gauge reaches 60 degrees. The dishwasher is now ready for use.

### WASHING

Select the speed you require, using the rotary speed selector switch. The standard speed (1 arrow symbol) is recommended for normally soiled dinner plates. Use the fast speed (2 arrow symbol) for lightly soiled items. Press the conveyor "START" button. Always use the correct basket for the items to be washed. Scrape all loose food off plates before loading into basket. Rinse away sauces or gravies before loading into machine. Introduce the first basket full of dirty items into the load end of the dishwasher, where it will be pulled through the machine by the conveyor mechanism and pushed out at the other end. Note that the exit table is fitted with a safety switch to stop the conveyor when the table is full. The conveyor will not restart until the table is cleared.

To stop the conveyor at any time, use the conveyor stop button. ***In an emergency, use the emergency stop switch, which will hold in. Twist to release so that the machine can be restarted.***

### DRAIN-DOWN & DAILY CLEANING - ***Never use cleaning products containing chlorine (bleach)***

When you have finished washing, switch off the dishwasher using the main switch on the control panel. Open the machine door, remove the scrap filter trays and turn the drain valve lever to 3 o'clock. Rinse filter trays under running water, using a soft nylon brush to remove any debris. Rinse out the inside of the machine using a wash-down hose, or a bucket of clean water. Always leave the door open when the machine is not in use.

### WEEKLY CLEANING - ***Never use cleaning products containing chlorine (bleach)***

In addition to cleaning filters **EVERY** time tank is drained, wash arms (upper & lower) should be removed for cleaning on a weekly basis. Release arms which have a bayonet fitting action and wash in clean water to remove any residues. Do not poke wash or rinse jets with any sharp object which will cause damage and affect wash performance. The end caps can be unscrewed so that the arms can be flushed through. Remove the internal curtains and scrub thoroughly at the sink to remove any food remains. Make sure that each curtain is replaced in the correct position.

### WATER TREATMENT

If you are in a hard water area, this dishwasher must be used in conjunction with an external water softener. Keep automatic water softeners topped up with salt. Salt manual water softeners at least once per week, more frequently if the interior of the machine shows any sign of scale build-up. ***Failure to adequately treat water will give bad results and cause damage to the dishwasher***