


# operating instructions – W1400A & W1400SA Pass-through Dishwashers

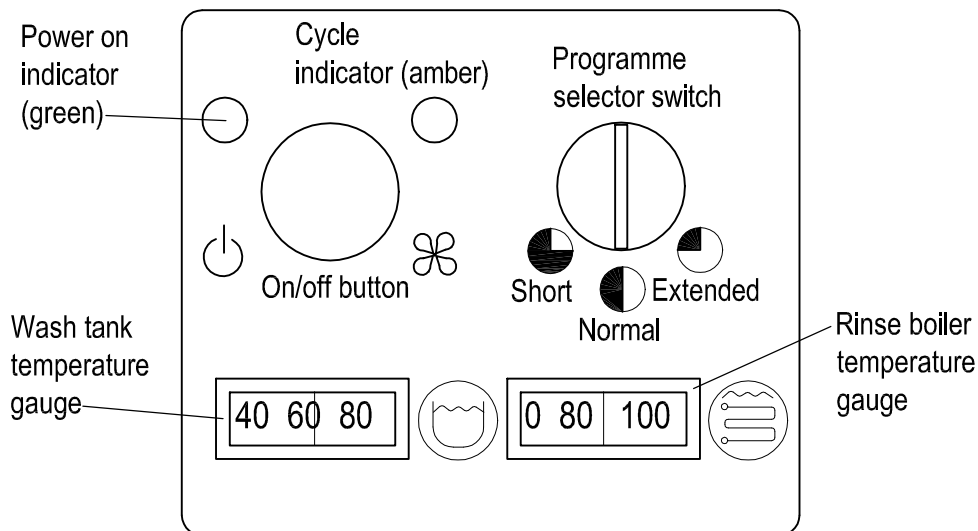

## Control Panel

### Using the machine

#### FILLING

Make sure wash and rinse arms are fitted correctly and that all filters are in place. Check that drain plug is in position and pushed securely into drain seat. Hold the hood handle in the centre and pull down gently to close the hood. Turn on mains switch (on wall) and press on/off button. Machine will fill and will start to heat up. Keep hood closed whilst machine is filling. Wait until boiler temperature gauge reads 80 to 85 degrees and wash tank gauge reads 55 to 60 degrees before using machine for the first time. This will take approximately 40 minutes from cold.

#### WASHING

Select the programme you require, using the rotary programme selector switch. The "Normal" programme is recommended for normally soiled dinner plates. Use the correct basket for the items to be washed. Scrape all loose food off plates before loading into basket. Rinse away sauces or gravies before loading into machine. Slide basket full of dirty items into dishwasher, lower hood handle and cycle will start. Wait until the cycle indicator light goes out before lifting hood handle, holding handle in the centre. Remove basket of clean crockery and slide next basket of dirties into dishwasher. Another cycle will start automatically when the hood is lowered.

#### DRAIN-DOWN & DAILY CLEANING

Press on/off button to switch off dishwasher. **Switch off isolator on wall** (except machines fitted with drain pump, leave switched on at wall until fully drained). Open hood, remove basket carrier, top tank filter and drain plug. Wait until tank has drained, then remove pump filter. Rinse top filter and pump filter under running water, using a soft nylon brush to remove any debris. Replace filters in their correct positions.

#### WEEKLY CLEANING

In addition to cleaning filters **EVERY** time tank is drained, wash and rinse arms (upper & lower) should be removed for cleaning on a weekly basis. Release arms by turning grey locking knob anti-clockwise. Wash in clean water to remove any residues. Do not poke wash or rinse jets with any sharp object which will cause damage and affect wash performance. Remove break tank cover plate by pushing up and then lifting keyholes over the 4 fixing screws. Wipe clean reverse of cover plate and around water entry points on dishwasher back panel. Replace cover plate using keyhole fixing system. Maintain the interior and exterior of the dishwasher by wiping out all corners of the tank and hood with a damp cloth.

#### WATER TREATMENT

If you are in a hard water area, this dishwasher must be used in conjunction with an external water softener. Keep automatic water softeners topped up with salt. Salt manual water softeners at least once per week, more frequently if the interior of the machine shows any sign of scale build-up. **Failure to adequately treat water will give bad results and cause damage to the dishwasher**

Proton Southern Limited, West Quay Road, SOUTHAMPTON SO15 1GZ Tel: 023 8063 2766 Fax: 023 8031 5999