



## Using the machine

### FILLING

Make sure wash and rinse arms are fitted correctly and that all filters are in place. Check that drain plug is in position and pushed securely into drain seat.

Turn on mains switch (on wall) and press "On/off Switch". Machine will fill and will start to heat up. Allow at least 30 minutes for machine to reach operating temperature, before starting first wash cycle.

### WASHING

1. Select the programme you require by pressing the "Programme Selector Button" until the programme of your choice is illuminated. Choose the 3 minute programme "III" for normally-soiled dinner plates etc., or the 2 minute programme "II" for lightly-soiled items.
2. Use the correct basket for the items to be washed - dinner plates, side plates, shallow bowls in peg basket. Cups, deep bowls, cutlery, utensils in open basket. Scrape all loose food off plates before loading into basket. Rinse away sauces or gravies before loading into machine.
3. Load basket full of dirty items into dishwasher, close door and press "Cycle switch" to start wash programme. Wait until the cycle indicator light goes out before opening door. Remove basket of clean crockery and load another basket of dirties into dishwasher. Press "Cycle switch" again to start next wash cycle. **Only load one basket at a time into dishwasher.**

### DRAIN-DOWN & DAILY CLEANING

1. **Machines without drain pump:** Switch off machine by pressing "On/off switch" and open door. Remove the grey plastic stand pipe (drain plug) and allow the water to drain. **Do not remove tank filters until all water has been drained from the wash tank.**
2. **Machines with drain pump:** Open door and remove grey plastic stand pipe (drain plug). Close door and switch off machine by pressing "On/off switch". Drain pump will now run until tank is empty and will then turn itself off.
3. **All machines:** Remove stainless steel tank filters and rinse under running water, using a soft nylon brush to remove any debris. **Always switch off at the isolator on the wall when the dishwasher is not being used.**

### WEEKLY CLEANING

In addition to cleaning filters **EVERY** time tank is drained, wash and rinse arms (upper & lower) should be removed for cleaning on a weekly basis. Release arms by turning grey locking knob anti-clockwise. Wash in clean water to remove any residues. Do not poke wash or rinse jets with any sharp object which will cause damage and affect wash performance. Ensure that rinse arms are replaced the right way up. Maintain the interior and exterior of the dishwasher by wiping out all corners of the tank and cabinet with a damp cloth .

### WATER TREATMENT

If the incoming water supply has a total hardness greater than 7 degrees Clarke, this dishwasher must be used in conjunction with an external water softener. Keep automatic softeners topped up with salt and regenerate manual softeners at least once per week. **Failure to adequately treat water will give bad results and cause damage to the dishwasher.**