

WATER SOFTENERS

USE AND MAINTENANCE

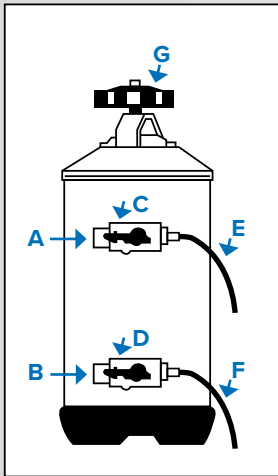


Fig. 1

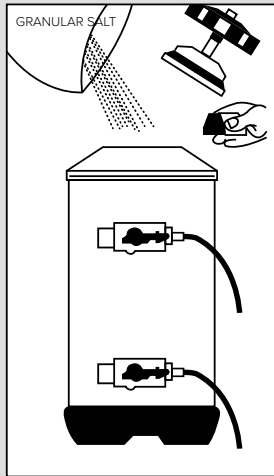


Fig. 2

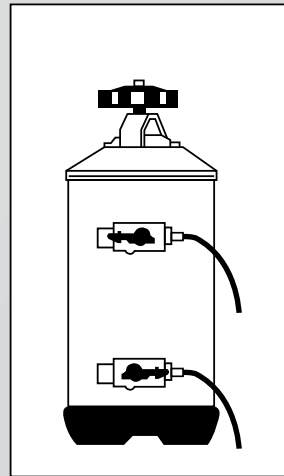


Fig. 3

Figure 1 illustrates the softener in normal use. Connection **A** (Top) is to the incoming water supply. Connection **B** is to the Dish/Glass washer. Both tap levers should be pointing to the left hand side (9 o'clock).

To Re generate your softener (Salt)

Wear hand protection for this procedure.

1. Place short tube **E** into a bucket and long tube **F** into a nearby sink or suitable drain securing it in place.
2. Turn both tap levers from left to right allowing pressure to release from cylinder and water to drain.
3. Unscrew black knob **G** and remove lid. This will allow more water to drain into bucket and expose brown resin in softener. **Never empty resin from softener.**
4. Pour granular salt on top of resin (1.5 litres of salt for 12 litres softener, 2 litres of salt for 16 litres softener).
5. Clean and replace the lid ensuring the black O-seal is in place. The Black Nut **G** must not be over tightened (finger tight). **Beware of any sharp edges on the softener rim and do not attempt to place hands inside the cylinder.**
6. Turn top lever from right to left hand side. The cylinder will pressurise and water will run to waste from tube **F**. keep in this position for 40 minutes or until water no longer tastes of salt.
7. Turn bottom lever from right to left hand side. This completes the regeneration procedure.

Note: If dish/glass washer fails to fill after regeneration check that both tap levers are pointing to the left.

JLA1228 | 21.01.19